

TIP!
 DO NOT FULLY TIGHTEN SCREWS UNTIL ALL SCREWS HAVE BEEN LOOSELY POSITIONED.
 BEFORE ASSEMBLING, MAKE SURE THERE ARE NO MISSING PARTS.


PARTS LIST

- A1** Left Side Panel
- A2** Right Side Panel
- B** Center Panel
- C** Middle Shelf
- D** Bottom Shelf
- E** Divider
- F** Kick Plate
- G** Hex-Head Screw(15)
- J** Hex Key Tool

WARNING:
Adult Assembly Required. Two adults recommended.
 - Contains small parts, sharp points and edges.
 - Do not stand, sit, kneel, climb, lean or pull on unit for support.
 - Never leave children unattended.
 - Do not place unit near high heat or moisture.
 - Adult Supervision Recommended.


If you experience any difficulties with this product, please contact us toll free at 1-888-227-9028 (Monday through Friday, 9:00am to 5:00pm Eastern Time).
 Please do not return to place of purchase. Early Childhood Resources will replace defective part(s) or product.

1 Attach the Left Side to the Bottom Shelf

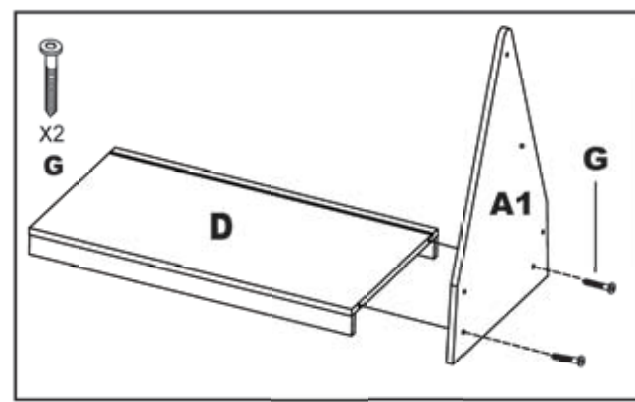


1. Attach the Left Side Panel(A1) to Bottom Shelf(D) using 2 Hex Head Screws(G). Tighten with Hex Key Tool(J).

2 Attach the Middle Shelf to the Center Panel

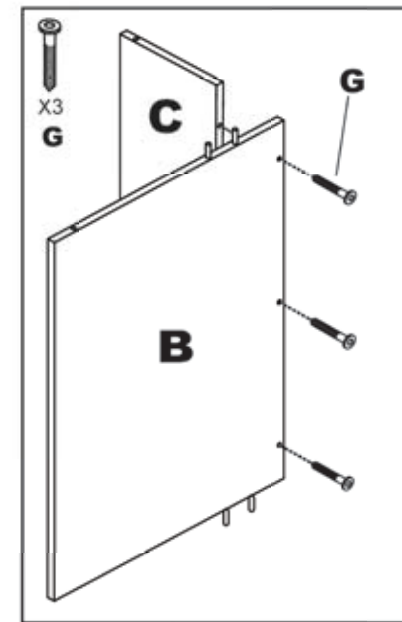

2. Attach the Middle Shelf(C) to the Center Panel(B) using 3 Hex Head Screws(G) as shown. Tighten with the Hex Key Tool(J).


3 Attach the Center Panel and Middle Shelf to the Unit

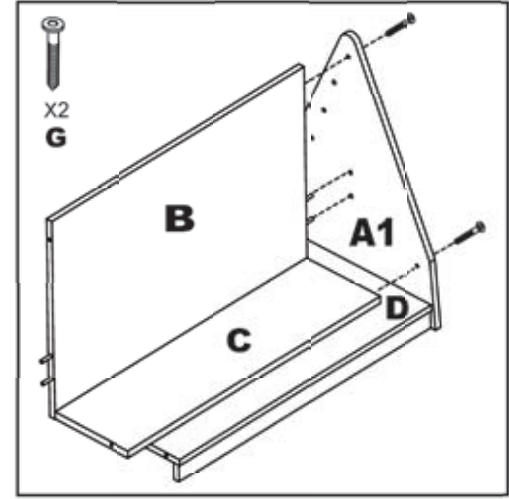

3A. **Two Adults Suggested:** Position the Center Panel Section(B,C) so the 2 attached Wooden Dowels on the end are fully inserted into the holes inside the Left Side Panel(A1).

3B. Secure the Center Panel(B) and Middle Shelf(C) to the Left Side Panel(A1) using 2 Hex Head Screws(G) as shown. Tighten with Hex Key Tool(J).


4 Attach the Dividers

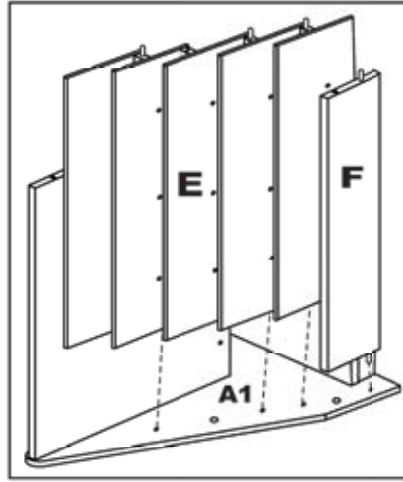

4A. On a carpet or a protected surface, carefully lay the unit on its Left Side(A1). Position the pre-assembled Dividers(E), be sure the pre-installed 3 wooden dowels on side end can fully enter holes in Left Side Panel (A1)

4B. Insert the attached 1 Wooden Dowel on the end of Kick Plate(F) into the holes inside Left Side Panel(A1) as shown, into fully inserted into the hole.

5 Attach the Right Side Panel

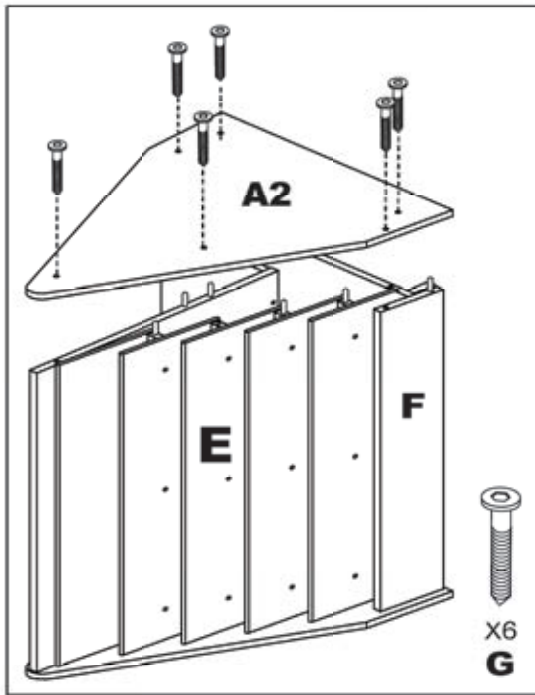


5A. Position Right Side Panel(A2) so the 6 Wooden Dowels on the ends of the Kick Plate(F), Divider (E) & Center Panel(B) into the holes on the inside of the Right Side Panel(A2).

5B. Secure Right Side Panel(A2) to the Middle Shelf(C), Bottom Shelf(D), Kick Plate(F) and Center Panel(B) using 6 Hex Head Screws(G). Tighten with the Hex Key Tool(J).


6 Secure the Dividers to the Unit

6A. **Two Adults Suggested:** On a Carpet or protected surface, Turn unit up right.

6B. Insert 2 Hex Head Screw(G) through the remaining holes in Left Side Panel(A1) and into the Kick Plate(F) and Shelves(E) as shown. Tighten with a Hex Key Tool(J).

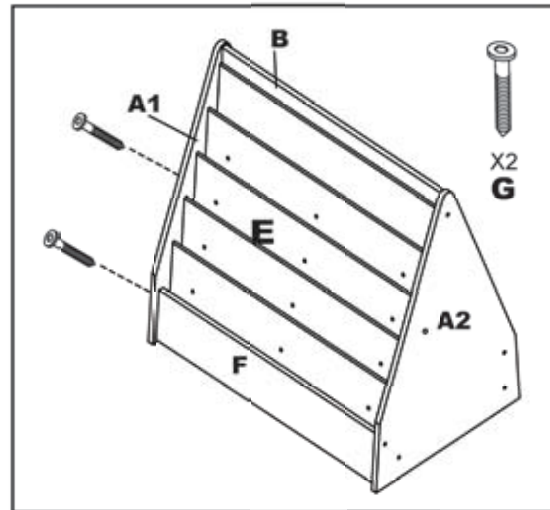

7 You are done!

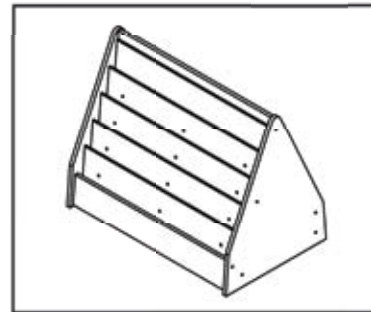

⚠ CAUTION:

- Do not allow children to climb on shelves.
- Do not use as a ladder, seat or cart.

Early Childhood RESOURCES

We appreciate your purchase of the Pic-A-Book Stand. Early Childhood Resources® has made every effort to supply a quality product, that with proper use and care, will bring you many years of trouble free use!

Care and Cleaning

Clean wood with a damp cloth or sponge using warm water and mild soap. Wipe dry.


Do not place near heat, moisture or vaporizer which may cause wood to warp and peel.

Check for loose or worn parts periodically and tighten or replace as necessary.



"Early Childhood Resources® guarantees the quality of all of our products. You can trust the quality and safety of our furniture and materials, along with the peace of mind that our products are made to last. If for any reason, you are not satisfied with the quality and workmanship of our products, we will replace the item or refund the sale."

Record the Model Number and Batch ID from your shipping carton on the lines below. This information may also be found on a label enclosed. Place this sheet in an accessible place for future reference.

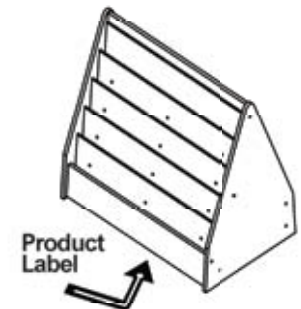

Model Number: **ELR-0637**

Purchase Order Number: ECR20 _____ - _____