


**Square Book
Display**
Model #ELR-0677

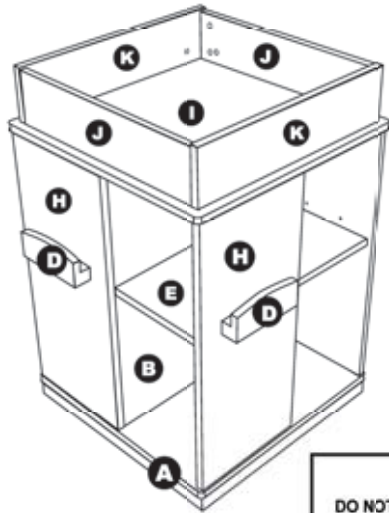

PARTS LIST

- A** Base
- B** Lower Divider-1
- C** Lower Divider-2
- D** Red Shelves(4)
- E** Center Shelf
- F** Upper Divider-1
- G** Upper Divider-2
- H** Outer Sides(4)
- I** Top Shelf
- J** Short Top Rail
- K** Long Top Rail
- L** Cams(56)
- M** Metal Dowels(56)
- N** Screws(8)
- O** Wheel Casters(4)
- P** Caster Screws(16)
- Q** Hex Key Tool
- R** Flat Cross Screws(8)

NOTE:
A Phillips Head Screwdriver
will be needed for
Assembly(not included)



TIP!
DO NOT FULLY TIGHTEN SCREWS
UNTIL ALL SCREWS HAVE
BEEN LOOSELY POSITIONED.

**BEFORE ASSEMBLING, MAKE SURE
THERE ARE NO MISSING PARTS.**

WARNING:

**Adult Assembly Required. Two
adults recommended.**

- Contains small parts, sharp points
and edges.

- Do not stand, sit, kneel, climb, lean
or pull on unit for support.

- Never leave children unattended.

- Do not place unit near high heat or
moisture.


- Adult Supervision Recommended.

If you experience any difficulties
with this product, please contact
us toll free at (888) 227-9028
(Monday through Friday,
9:00am to 5:00pm Eastern Time).

**Please do not return to place of
purchase. Early Childhood
Resources will replace defective
part(s) or product.**

1 Assemble the Lower Dividers

Align slits in Lower Dividers
1 & 2(B,C) with each other,
then slide Lower Divider-2(C)
onto Lower Divider-1(B) as
shown until slits are fully
engaged.

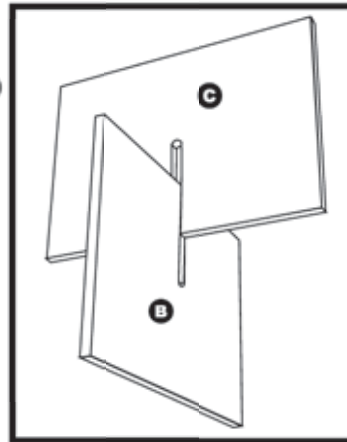


**2 Attach Lower Dividers to
Middle Shelf & Assemble
Upper Dividers**

Align slits in Upper Dividers-1 & 2(F,G) with each other, then slide
Divider-2(G) onto Divider-1(F) as shown until slits are fully engaged.

Fasten both Upper Dividers-1 & 2(F,G) to Center Shelf(E) using
4 Screws(N). Tighten with the Hex Key Tool(Q).

Insert 4 Metal Dowels(M) into the plastic plugs located on the
underside of Center Shelf(E). Tighten with a Phillips Screwdriver.

Insert Cams(L) into the large holes near the top edge of Lower
Dividers-1 & 2(B,C). Make sure the arrows on Cams(L) point
toward the holes in the closest edge.

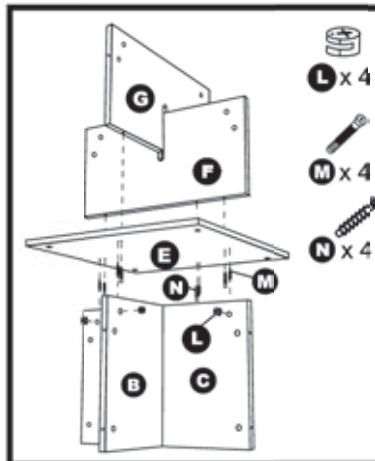

Position Center
Shelf(E) so that Metal
Dowels(M) enter the
holes in the top edge
of the Lower Dividers-
1 & 2(B,C), then turn
Cams(L) with a Phillips
Head Screwdriver until
locked onto the Metal
Dowels(M).


3 Attach Outer Sides

Insert 16 Metal Dowels(M) into plastic plugs located on inside
surface of Outer Sides(H) and tighten with Phillips Head Screwdriver.

Insert 8 Cams (L) into large holes of Lower Dividers(B & C) and 4
Cams (L) into large holes of Upper Dividers(F&G) and 4 Cams(L)
into large holes of Center Shelf(E) making sure that the arrow on the
Cams point towards the holes in the closest edge.

Position Outer Sides(H) so that Metal Dowels(M) enter holes in top edges
of Upper & Lower Dividers & Center Shelf (B,C,F,G & E) & turn Cams
(L) with Phillips Head Screwdriver until locked onto Metal Dowels(M)

Attach Red Shelves(D) to Outer Sides(H) with 8 Flat Cross Screws(R)
using a Phillips Head Screwdriver

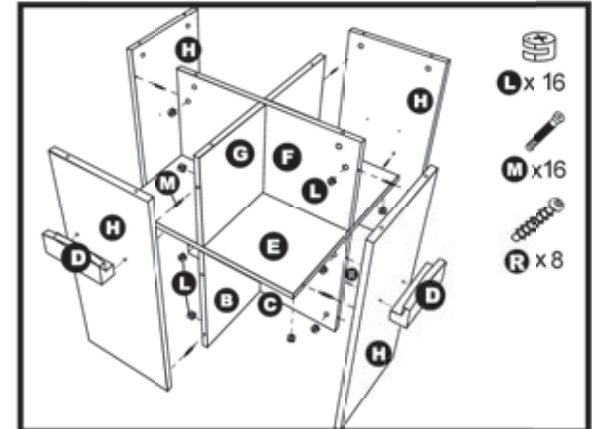


- L** x 16
- M** x 16
- R** x 8

4 Attach Base

Insert 8 Metal Dowels(M) into plastic plugs located on top of Base(A)
and tighten with Phillips Head Screwdriver.

Insert 8 Cams (L) into large holes of located near bottom edge of
Outer Sides (H) making sure that the arrow on the Cams point
towards the holes in the closest edge.

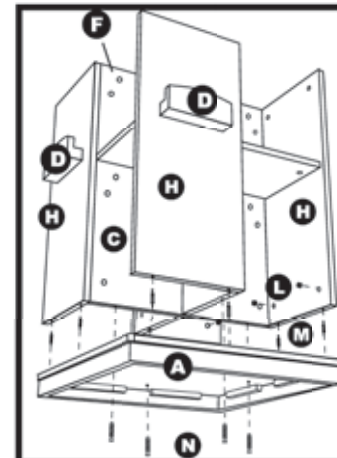

Position Outer Sides(H) so
that all 8 Metal Dowels(M)
on Base (A) enter holes in
bottom edges & turn Cams(L)
with Phillips Head Screwdriver
until locked onto Metal
Dowels(M).

Fasten Lower Dividers(B&C)
to Base(A) with 4 Screws(N)
using Hex Key Tool(Q)
provided.


- L** x 8
- M** x 8
- N** x 4

5 Install Top Shelf

Insert 12 Metal Dowels(M) into the plastic plugs located underneath Top Shelf(I). Tighten with a Phillips Head Screwdriver.

Insert 12 Cams(L) into the large holes near the top edge of the Upper Dividers(F,G). Make sure the arrows on Cams(L) point toward the holes in the closest edge.

Position Top Shelf(I) so that Metal Dowels(M) enter holes in the top edges of both Upper Dividers(F,G), then turn Cams(L) with a Phillips Screwdriver until locked onto the Metal Dowels(M).

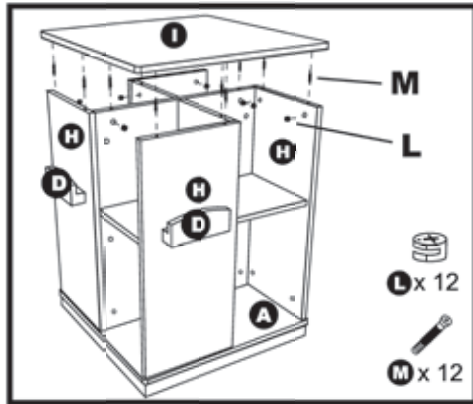


6 Assemble the Top Rails

Insert 8 Metal Dowels(M) into the plastic plugs located near the side edges of both Long Top Rails(K). Tighten with a Phillips Screwdriver.

Insert 8 Cams(L) into the large holes near the side edges of both Short Top Rails(J). Make sure the arrows on Cams(L) point toward the holes in the closest edge.

Position the Long Top Rails(K) so the attached Metal Dowels(M) enter holes in the unfinished edges of both Short Top Rails(J) as shown. Turn Cams(L) with a Phillips Screwdriver until locked onto the Metal Dowels(M).

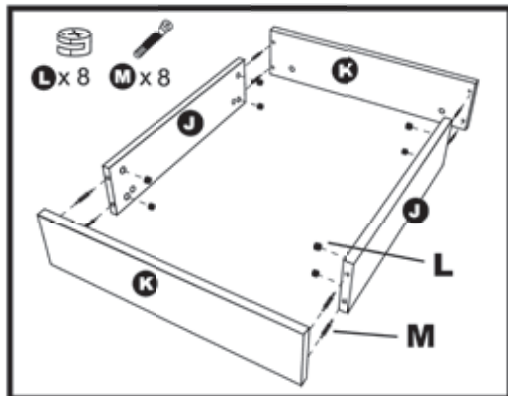


7 Attach the Top Rails to the Top Shelf

Insert 8 Metal Dowels(M) into the plastic plugs located on top of Top Shelf(I). Tighten with a Phillips Screwdriver.


Insert 8 Cams(L) into the large holes near the bottom edges of the Top Rails(J,K). Make sure the arrows on Cams(L) point toward the holes in the closest edge.

Position the assembled Top Rails(K) so the Metal Dowels(M) attached to Top Shelf(I) enter holes in bottom edges of all 4 Top Rails(J,K) as shown. Turn Cams(L) with a Phillips Screwdriver until locked onto the Metal Dowels(M).

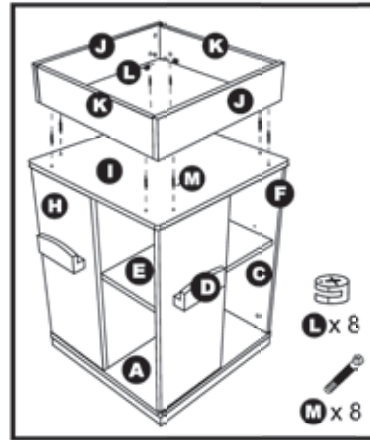

8 Attach the Wheel Casters (Optional)

Fasten the 4 Wheel Casters(C) to Base(A) with 16 Caster Screws(P), using 4 per Caster(O). Tighten with a Phillips Head Screwdriver.

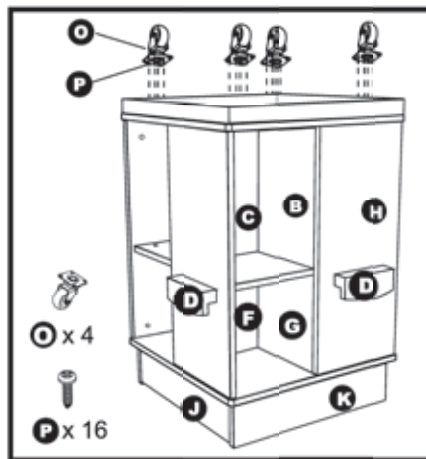

9 You Are Done!

CAUTION:

- Do not allow children to climb on shelves.
- Do not use as a ladder, seat or cart.

**Early Childhood
RESOURCES**

We appreciate your purchase of the Square Book Display. Early Childhood Resources has made every effort to supply a quality product, that with proper use and care, will bring you many years of trouble free use!

Care and Cleaning

Clean wood with a damp cloth or sponge using warm water and mild soap. Wipe dry.


Do not place near heat, moisture or vaporizer which may cause wood to warp and peel.

Check for loose or worn parts periodically and tighten or replace as necessary.



"Early Childhood Resources® guarantees the quality of all of our products. You can trust the quality and safety of our furniture and materials, along with the peace of mind that our products are made to last. If for any reason, you are not satisfied with the quality and workmanship of our products, we will replace the item or refund the sale."

Record the Model and ECR Purchase Order Number from your shipping carton on the lines below. This information may also be found on a label enclosed. Place this sheet in an accessible place for future reference.

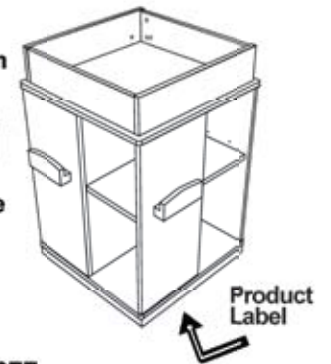

Model Number: ELR-0677

Purchase Order Number: ECR20 _____ - _____