 


4 Station Art Easel with Storage

Model No. ELR-0692

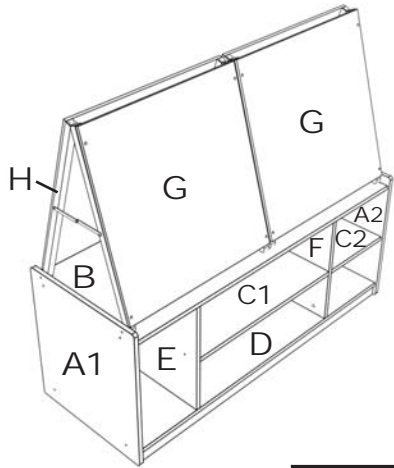

TIP!
DO NOT FULLY
TIGHTEN SCREWS
UNTIL ALL SCREWS
HAVE BEEN LOOSELY
POSITIONED.

**BEFORE ASSEMBLING,
MAKE SURE THERE
ARE NO
MISSING PARTS.**

PARTS LIST

- A1** Left Side Panel
- A2** Right Side Panel
- B** Top Shelf
- C1** Left Middle Shelf
- C2** Right Middle Shelf
- D** Bottom Shelf
- E** Left Divider
- F** Right Divider
- G** Easel Board(4)
- H** Easel Frame(4)
- I** Round Hex Screw(16)
- J** Flat Hex Screw(16)
- K** Hex Key Tool
- L** Metal Dowel(12)
- M** Cam(12)

NOTE:

A Phillips Head Screwdriver will be needed for assembly (not included)



 
WARNING:

- **Adult Assembly Required.** Two adults recommended.
- Contains small parts, sharp points and edges.
- Do not stand, sit, kneel, climb, lean or pull on unit for support.
- Never leave children unattended.
- Do not place unit near high heat or moisture.
- **Adult Supervision Recommended.**

If you experience any difficulties with this product, please email us at customerservice@ecr4kids.com or call toll-free at (888) 227-9028 (Mon. through Fri., 8:00am to 4:00pm Eastern Standard Time)

Please do not return to place of purchase as Early Childhood Resources will replace defective part(s) and/or product.

1 Assemble the Divider Section

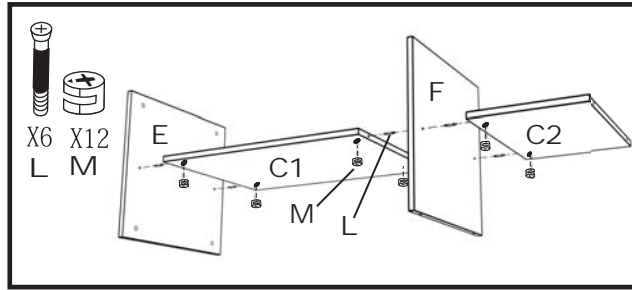

1A. Insert 6 Cams(M) into the large holes in Middle Shelves(C1,C2), as shown. Make sure the arrows on Cams(M) point toward the holes in the closest edge.


1B. Insert 6 Metal Dowels(L) into the plastic plugs located in the 2 Dividers(E,F). Tighten with a Phillips Head Screwdriver.

1C. Position Left Divider(E) so the attached Metal Dowels(L) enter the holes in side of Left Middle Shelf(C1). Turn Cams(M) with Phillips Head Screwdriver until locked onto Metal Dowels(L).

1D. Position Right Divider(F) so the attached Metal Dowels(L) enter the holes in the opposite side of Left Middle Shelf(C1) as shown. Turn Cams(M) with Phillips Screwdriver until locked onto Metal Dowels(L).


1E. Position Right Middle Shelf(C2) so the Metal Dowels(L) attached to Right Divider(F) enter the holes in its side as shown. Turn Cams(M) with Phillips Screwdriver until locked onto Metal Dowels(L).

 2 Attach the Bottom Shelf

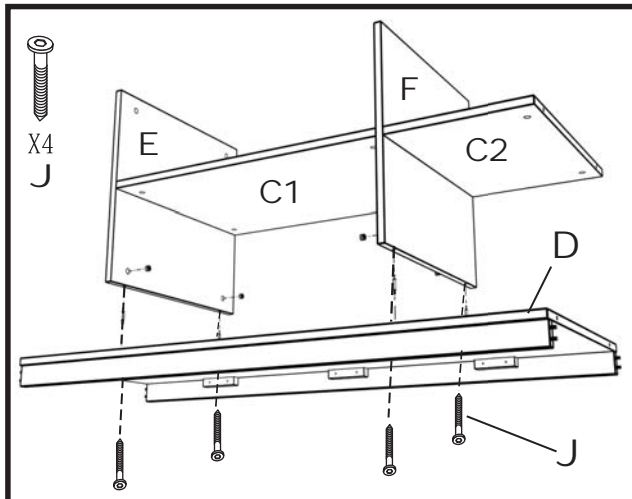

2. On a carpet or protected surface, attach Divider Section(C1,C2,E,F) to Bottom Panel(D) using 4 Flat Hex Screws(J). Tighten with the Hex Key Tool(K).

 3 Attach the Top Shelf

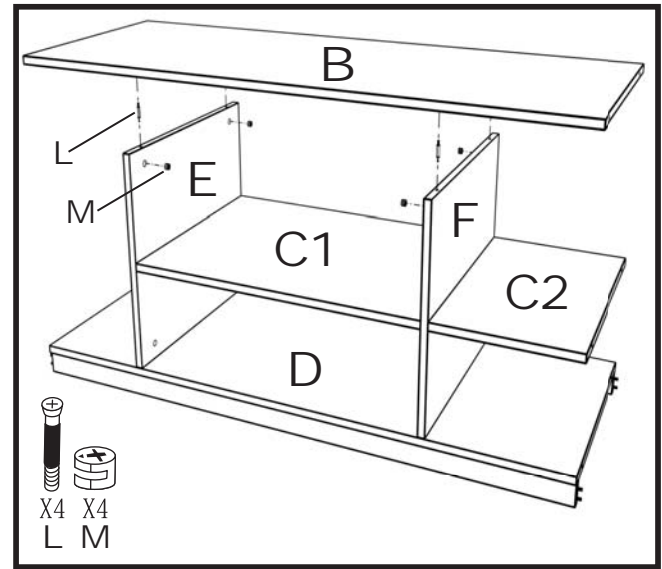


3A. Insert 4 Metal Dowels(L) into plastic plugs located underneath the Top Shelf(B). Tighten with a Phillips Head Screwdriver.


3B. Insert 4 Cams(M) into the large holes in the top of the Left and Right Dividers(E,F). Make sure the arrows on Cams(M) point toward the holes in the closest edge.

3C. Position Top Panel(B), so the attached Metal Dowels(L) enter the holes in top edge of the Left and Right Dividers(E,F). Turn Cams(M) with a Phillips Screwdriver until locked onto Metal Dowels(L).

 4 Attach the Side Panels

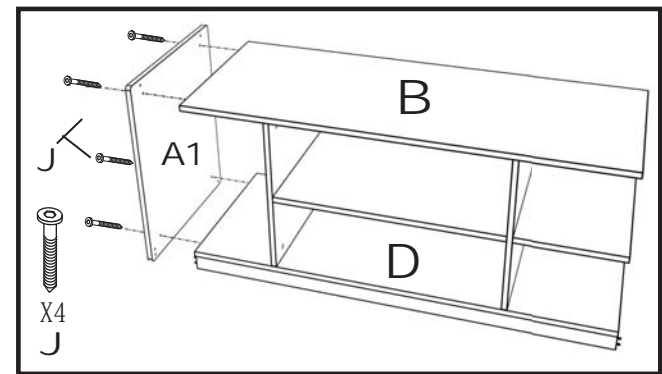

 4A. Attach Left Side Panel(A1) to the assembled unit using 4 Flat Hex Screws(J). Tighten with the Hex Key Tool(K).

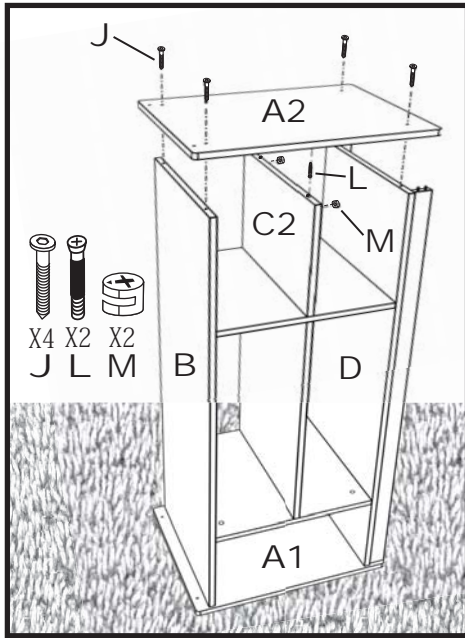


4B. Using 2 adults, turn the unit onto its Left Side(A1) on a carpet or protected surface, as shown. Insert 2 Metal Dowels(L) into the plastic plugs located inside the Right Side Panel(A2). Tighten with a Phillips Head Screwdriver.

4C. Insert 2 Cams(M) into the large holes underneath the Right Middle Shelf(C2) as shown. Make sure the arrows on Cams(M) point toward the holes in the closest edge.

4D. Position Right Side Panel(A2) so the attached Metal Dowels(L) enter the holes in the edge of Right Middle Shelf(C2). Turn Cams(M) with a Phillips Screwdriver until locked onto Metal Dowels(L).

4E. Secure Right Side Panel(A2) to Top Panel(B) and Bottom Panel(D) using 4 Flat Hex Screw(J). Tighten with the Hex Key Tool(K).

 5 Attach the Easel Boards

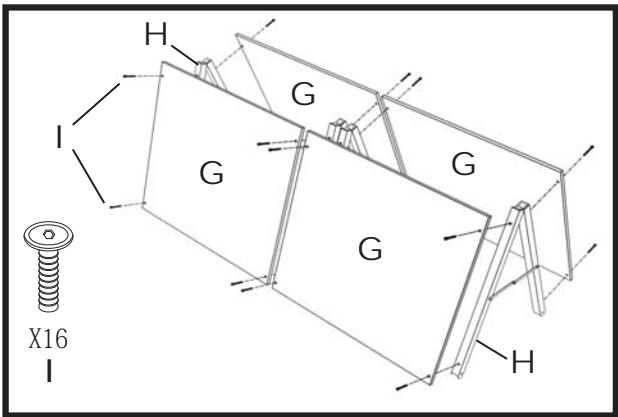


5. Attach the 4 Easel Boards(G) to the 4 Easel Frames(H) using 16 Round Hex Screws(I), using 4 in each Easel Board(G) as shown. Tighten with the Hex Key Tool(K).


6 Attach the Easel Frames to the Base

6A. **Two Adults Suggested:** Carefully lift the assembled Easel Frame Section(G,H) to rest on the Top Shelf(B) as shown.

 6B. Attach the 4 Easel Frame Section(G,H) to the Left and Right Side Panels(A1,A2) using 4 Flat Hex Screws(J). Tighten with the Hex Key Tool(K).

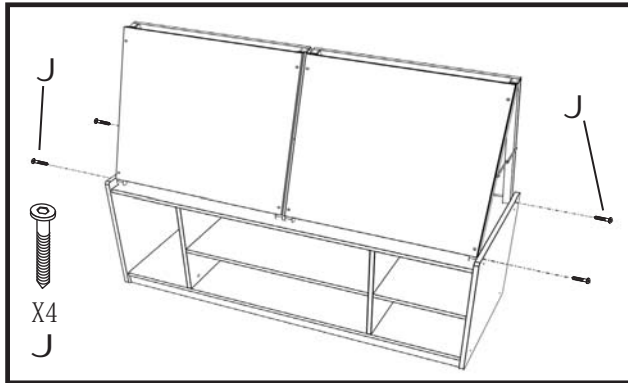

7 You are done!

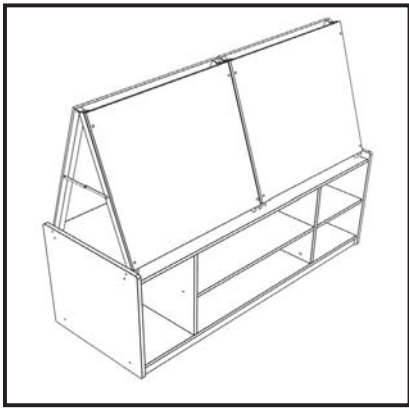 

CAUTION:

- Do not allow children to climb on shelves.
- Do not use as a ladder, seat or cart.



We appreciate your purchase of the 4 Station Art Easel with Storage. Early Childhood Resources® has made every effort to supply a quality product, that with proper use and care, will bring you many years of trouble free use!

Care and Cleaning

Clean wood with a damp cloth or sponge using warm water and mild soap. Wipe dry.
Do not place near heat, moisture or vaporizer which may cause wood to warp and peel.
Check for loose or worn parts periodically and tighten or replace as necessary.



“Early Childhood Resources® guarantees the quality of all of our products. You can trust the quality and safety of our furniture and materials, along with the peace of mind that our products are made to last. If for any reason, you are not satisfied with the quality and workmanship of our products, we will replace the item or refund the sale.”

Record the Purchase Order Number here. Information is located on a label enclosed, and on the shipping carton. Place label and this sheet in an accessible place.

Model Number: ELR-0692

Purchase Order Number: _____