




Mt. Laurel, NJ 08054 USA
www.ecr4kids.com

Glider Rocker
Model# ELR-0820

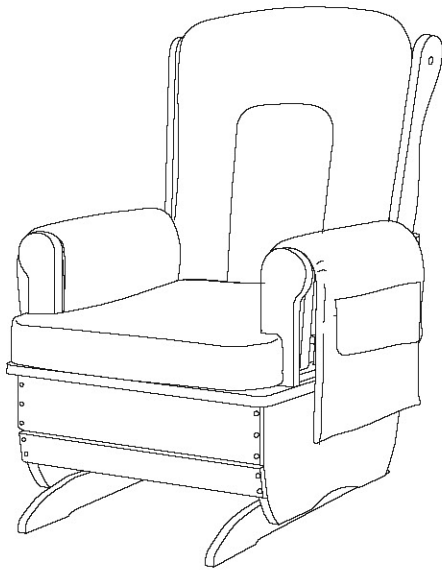

! WARNING:

Adult Assembly Required. Two adults recommended.

- This product contains small parts that may present a choking hazard for children aged 3 years or under.
- Do not stand, kneel, climb, lean or pull on unit for support. Intended for adult seating use only.
- Periodically, check for loose or worn parts and tighten or repair as necessary.



 




TOOLS INCLUDED

Hex Tool (1)



Parts List

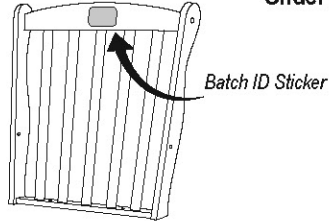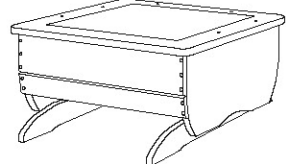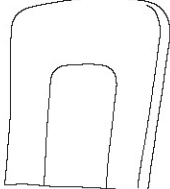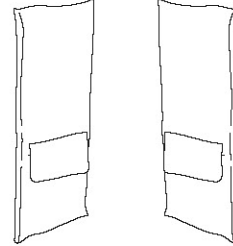
BEFORE ASSEMBLING, MAKE SURE YOU HAVE ALL THE PARTS

<p>A</p>  <p>Glider Back (1)</p>	<p>D</p>  <p>Glider Bottom (1)</p>
<p>B</p>  <p>Glider Arms (2)</p>	<p>E</p>  <p>Back Cushion (1)</p>
<p>C</p>  <p>Side Pouch (2)</p>	<p>F</p>  <p>Seat Cushion (1)</p> <p>G Hex Screw (8) 30mm Use the Hex Tool</p> <p>K Washer (8)</p> 

1 Attach Glider Back to Glider Bottom


Install the **Glider Back (A)** onto the **Glider Bottom (D)** with **2 Washers (K)** and **2 Hex Screws (G)**, using the **Hex Tool**.

Tip: Connect the screws loosely at first. Once all screws have been installed correctly, tighten securely.

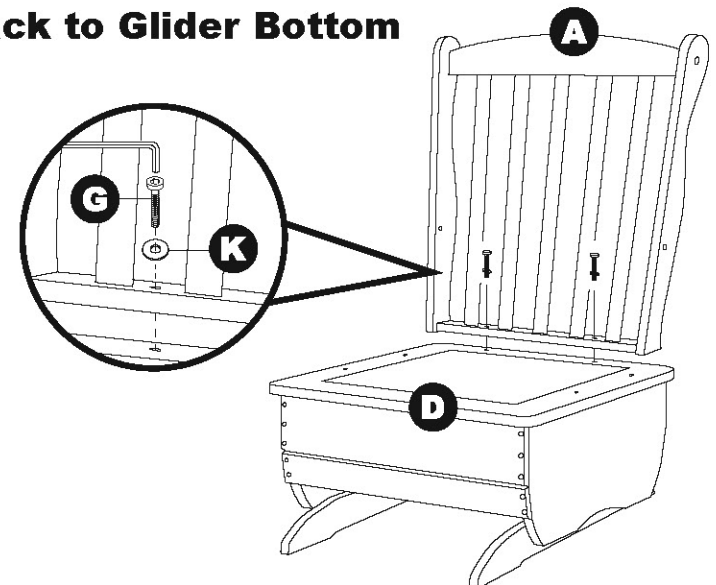


2 Attach Glider Arms to Glider Bottom

Install the 2 Glider Arms (B) onto the Glider Bottom (D) with 4 Washers (K) and 4 Hex Screws (G) using the Hex Tool.

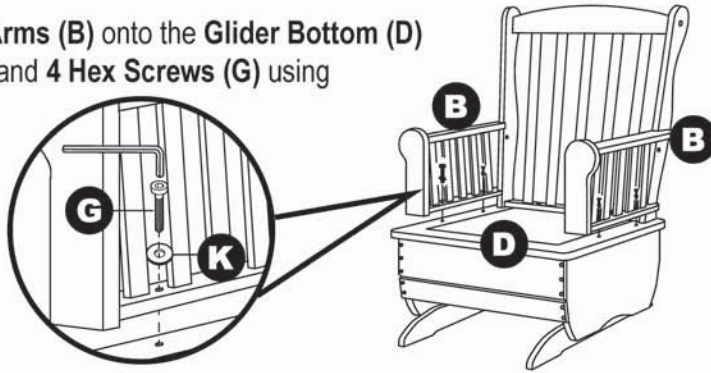




3 Attach Glider Arms to Glider Back

Secure the backs of the 2 Glider Arms (B) to the Glider Back (A) with 2 Washers (K) and 2 Hex Screws (G) using the Hex Tool.

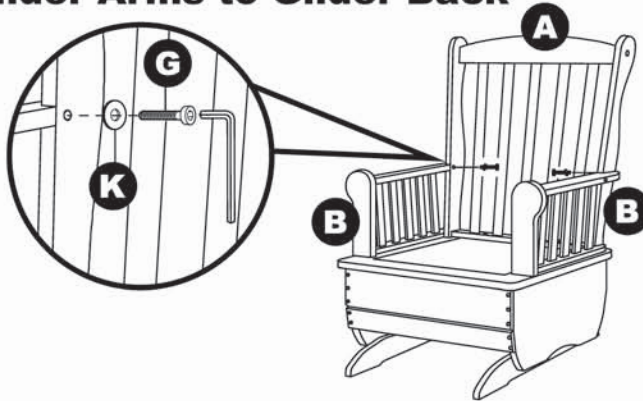

4 Attach Side Pouches

Secure the 2 Side Pouches (C) to the inside of the 2 Glider Arms (B) and outside of the Glider Bottom (D) using the snaps.

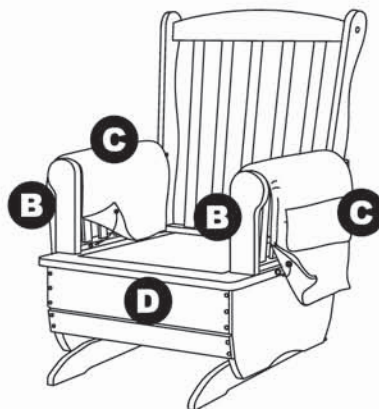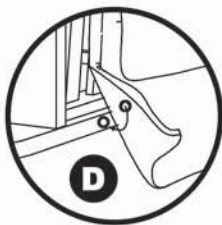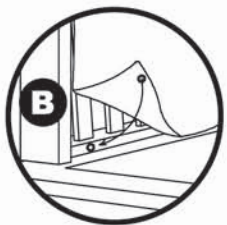

ECR[®]
4 KIDS

We appreciate your purchase of the Glider Rocker. ECR4KIDS[®] has made every effort to supply a quality product that with proper use and care, will provide many years of trouble-free use.

If you experience any difficulties with this product, please email us at customerservice@ecr4kids.com or call toll-free at (855) ECR-4KIDS (Monday - Friday, 7:00am - 4:00pm Pacific Standard Time)

Please do not return to place of purchase as ECR4KIDS[®] will replace defective part(s) and/or product.



ECR4KIDS[®] guarantees the quality of all our products. You can trust the quality and safety of our furniture and materials, along with the peace of mind that our products are made to last. If for any reason you are not satisfied with the quality or workmanship of our products, we will replace the item or refund the sale.

Care and Cleaning

Clean wood with a damp cloth or sponge using warm water and mild soap. Wipe dry.

Do not place near heat, moisture or vaporizer which may cause wood to warp and peel.

Check for loose or worn parts periodically and tighten or replace as necessary.

Record the manufacture date here. Information is located on the Batch ID sticker and on the shipping carton. Save this sheet in an accessible place.

Model Number: ELR-0820

Factory Code: CS

Manufacture Date: _____

Batch ID Number: _____
(Located on Part #A)