 
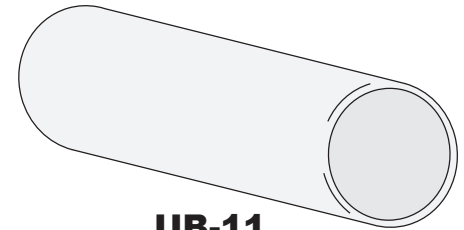 


# Hardwood Unit Blocks

## ELR-19000 Reference Chart

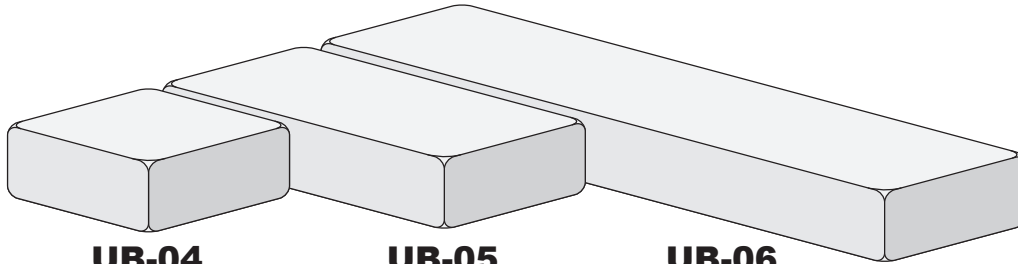

**UB-04**  
Half Unit

**UB-05**  
Unit Block

**UB-06**  
Double Unit

**UB-11**  
Large Column

ELR #	Description	ELR-19000
UB-04	Half Unit	60
UB-05	Unit Block	64
UB-06	Double Unit	2
UB-11	Large Column	10
<b>Totals</b>		<b>154</b>