

Activity Tables Assembly Instructions

PARTS LIST

BOX 1:

A Table Top

BOX 2:

B Top Legs (4)

C Bottom Legs (4)

D Phillips Head Screws (12)



E Hex Head Screws (8)

F Allen Wrench




NOTE:

A Phillips Head Screwdriver and a Rubber Mallet will be needed for Assembly(not included)



**BEFORE ASSEMBLING,
MAKE SURE THERE
ARE NO
MISSING PARTS.**

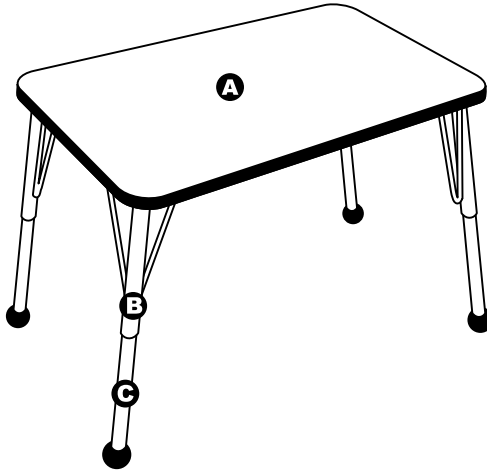

⚠ WARNING:

Contains small parts, sharp points and edges. Must be assembled by an adult.

If you have any damaged or missing components, contact customer service toll free at 1-888-227-9028 or email

customerservice@ecr4kids.com

Please do not return to place of purchase as Early Childhood Resources will replace defective product-(continental USA)

**TIP!
DO NOT FULLY
TIGHTEN SCREWS
UNTIL ALL SCREWS
HAVE BEEN LOOSELY
POSITIONED.**

7 YEAR LIMITED WARRANTY

Early Childhood Resources will supply to the original owner, without charge, any part discovered to be missing at the time of purchase or found to be defective during the 7-year warranty period. The warranty begins on the date of purchase. The model number and the part description must be provided. The warranty does not apply to defects caused by owner damage, product alteration, or unreasonable use. If you need assistance, contact Early Childhood Resources.

Attach Legs to Table Top

1. Place Table Top (A) face down, on a carpet or protected surface to prevent scratches.
2. Slide leg plate of Top Leg (B) under the edge of one of the corner brackets. See Figure A.
3. Tap the Top Leg (B) into place with a rubber mallet until the pilot hole is visible through the center hole in the leg plate. If needed, loosen the screws to allow more clearance.
4. Using the Phillips Head Screws (D) (3 per leg), attach the leg using a Phillips Screwdriver. See Figure B.
5. Repeat steps 2 through 4 for the other 3 legs. Make sure all screws are fully tightened.


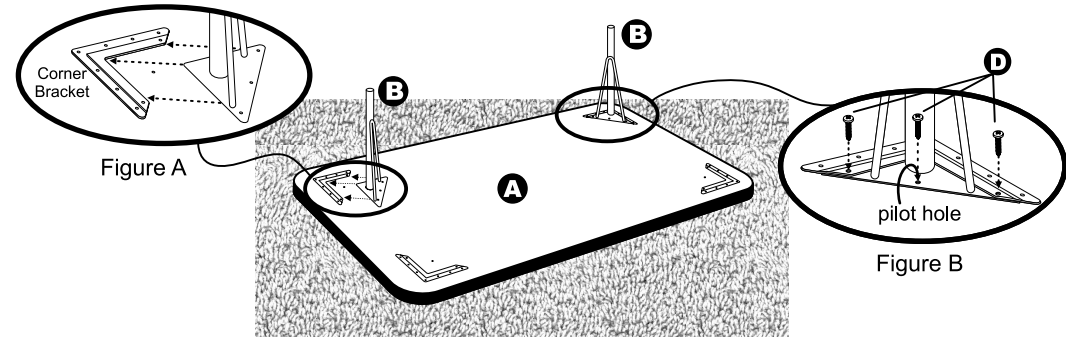


Table Leg Height Adjustment

Insert Lower Leg (C) into Upper Leg (B) and line up holes at desired height as shown below. Fasten each leg with 2 Hex Head Screws (E) using Allen Wrench (F).

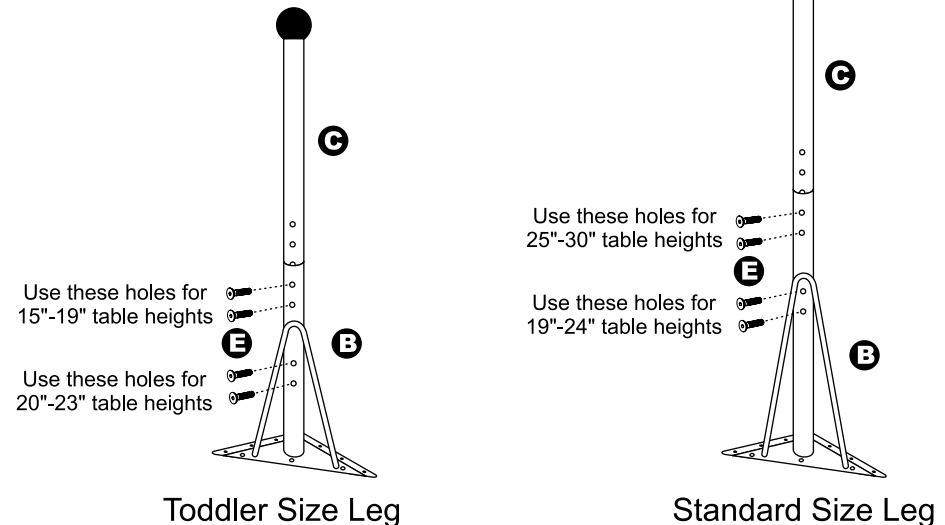

Toddler Size Leg

Standard Size Leg